

Aerial Lift Inspection PM Checklist

Actions and activities recommended in this guide should only be attempted by trained and certified personnel. If such personnel are not available, the actions recommended here should not be initiated. Frequencies indicated are based on a comparison of intervals from various industry sources and are provided solely for planning purposes.

Task ID	Task Name	Task Text	Frequency	Pre-Start Visual	Pre-Start Operational	Work Zone Inspection
ARL-001	Fluids	Check fluid levels (oil, hydraulic, fuel and coolant) and maintain as required.	Pre-Start Visual	X		
ARL-002	Leaks	Check the air, hydraulic, and fuel systems for leaks or other deficiencies. Inspect hoses, lines, and fittings for leaks.	Pre-Start Visual	X		
ARL-003	Wheel/Tires	Inspect wheels for damage and tires for excessive wear, cuts, bulges, and verify correct pressure. Inspect lug nuts.	Pre-Start Visual	X		
ARL-004	Anchor Point	Verify that the lift has a designated "anchor" point to attach fall protection. Do not use the lift if an anchor point is not available. Lanyards cannot be attached to the guardrail. Lanyards cannot be connected to the lanyard itself.	Pre-Start Visual	X		
ARL-005	PPE	Inspect all personal protective equipment such as hard hats and harnesses. Verify lanyard is in proper working condition and free of damage.	Pre-Start Visual	X		
ARL-006	Insulation	Inspect fiberglass and other insulating components to ensure they are free of damage and properly in place.	Pre-Start Visual	X		
ARL-007			Pre-Start Visual	X		
ARL-008			Pre-Start Visual	X		
ARL-009			Pre-Start Visual	X		
ARL-010			Pre-Start Visual	X		
ARL-011			Pre-Start Visual	X		
ARL-012			Pre-Start Visual	X		
ARL-013			Pre-Start Visual	X		
ARL-014			Pre-Start Visual	X		
ARL-015			Pre-Start Visual	X		
ARL-016			Pre-Start Visual	X		
ARL-017			Pre-Start Visual	X		
ARL-018			Pre-Start Operational		X	
ARL-019			Pre-Start Operational		X	
ARL-020			Pre-Start Operational		X	
ARL-021			Pre-Start Operational		X	
ARL-022			Pre-Start Operational		X	
ARL-023			Pre-Start Operational		X	
ARL-024			Pre-Start Operational		X	
ARL-025			Pre-Start Operational		X	
ARL-026			Pre-Start Operational		X	
ARL-027			Pre-Start Operational		X	
ARL-028			Pre-Start Operational		X	
ARL-029			Pre-Start Operational		X	
ARL-030			Work Zone Inspection			X
ARL-031			Work Zone Inspection			X
ARL-032			Work Zone Inspection			X

Only 6 of 38 displayed in this sample. Purchase required for the complete set. www.industrydocs.org